



105 Bonnie Drive  
Butler, PA 16002  
724-283-4681  
724-283-5939 (fax)  
www.bwieagle.com

# PRODUCT INFORMATION BULLETIN

## AIR-EAGLE® SR PLUS 2.4 GHz RF Transmitter MODEL 36P-12-ESTOP-DC


### DESCRIPTION

The AIR-EAGLE SR PLUS, MODEL 36P-12-ESTOP-DC is an R.F. transmitter designed to work with the model 38P-2-ESTOP receiver for failsafe emergency stop of any electrical apparatus. This transmitter has been factory programmed to emit a beacon signal that keeps the relays in the remote receiver energized. This provides a "handshake link" between the two units that if lost will automatically de-energize the E-Stop relay and shut down the equipment. While linked, pressing the E-Stop button will immediately de-energize the E-Stop relay. This transmitter is capable of reaching the receiver from up to 600 feet away and has eight user-selectable network frequencies to allow multiple systems to operate simultaneously in the same area without interference.

### INSTALLATION

1. Mount the AIR-EAGLE SR PLUS TRANSMITTER in a convenient location where the operator will have easy access to the stop button.
2. Install antenna onto antenna connector located on the right side on the enclosure.
3. Connect DC power to the proper terminals in your control circuit.

### TERMINAL STRIP WIRING

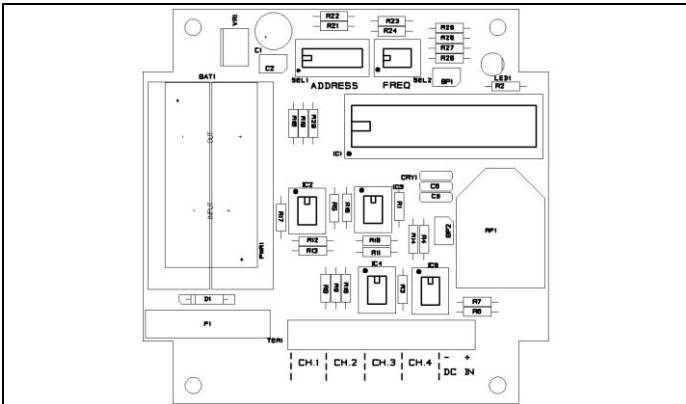

Wire as shown based on number of contact inputs

1	2	3	4	5	6	7	8	9	10
E-Stop Button Pre-Wired to Input 1	C Input 2	Input 2	C Input 3	Input 3	C Input 4	Input 4	Input 4	(-) 9-36VDC input	(+) 9-36VDC input



Dimensions (with mounting plate) 6.3" L x 4.8" W x 4.3" H

### CONTROLS & INDICATORS

PWR/TX LED	Illuminates green continuously while power is applied. Changes to red when transmitting data.
Beacon Emission	Invisible to the user this unit transmits a beacon signal every 0.1 seconds to keep the remote relays energized
STOP Pushbutton	Transmits CH1 RF "STOP" code to receiver

### FREQUENCY SET-UP

This transmitter is factory set to Frequency #1. This setting can be changed by the user at any time by following the directions below:

- 1) Remove power from unit
- 2) Remove top cover.
- 3) Select desired network frequency using table below.
- 4) Reattach cover and apply power.
- 5) Programming is now complete.

	Network Frequency	SW1	SW2	SW3
SEL 2 (SW 1-3): <i>(NETWORK FREQUENCY)</i>	1 (default)	OPEN	OPEN	OPEN
	2	CLOSED	OPEN	OPEN
	3	OPEN	CLOSED	OPEN
	4	CLOSED	CLOSED	OPEN
	5	OPEN	OPEN	CLOSED
	6	CLOSED	OPEN	CLOSED
	7	OPEN	CLOSED	CLOSED
	8	CLOSED	CLOSED	CLOSED
SEL2 (SW4)	Reserved for future use			

# AIR-EAGLE® SR PLUS

2.4 GHz RF Transmitter

**MODEL 36P-12-ESTOP-DC**

## APPROVALS

United States (FCC)	OUR-XBEEPRO
Canada (IC)	4214A-XBEEPRO
Europe (CE)	ETSI

## SPECIFICATIONS

Power Input	9 - 36 VDC @ 10 Watts
Transmit Frequency	2.4GHz Spread Spectrum
RF Output Power	60 mW
Transmit Range	Approximately 600 Feet
Transmit Data Channels	Four Dry Contact Input
Frequency Channels	8 Independent Network Frequencies
Antenna Connection	TNC Female
Enclosure	Polycarbonate, IP66, NEMA 4
Operating Temperature	-40° F to +185° F

## REPLACEMENT PARTS & ACCESSORIES

PC Board (Main)	36P-12-ESTOP2-DC
Standard Antenna (Included):	
2.4GHz TNC Portable Antenna (For distances up to 600 feet*)	49-1201
Antenna Extender	
TNC Bulkhead Antenna Extension Cable (2 Ft) - Used to Mount Supplied Antenna on Exterior of Cabinet	49-5004-2
Optional Antennas and Accessories – Used to increase range in both non line of sight and line of sight applications. - Contact BWI Eagle for recommendations	
2.4GHz Thru-Hole Mount Mobile Antenna	49-2201
2.4GHz Magnetic Mount Mobile Antenna	49-2202
2.4GHz Omni Directional Antenna	49-3201
2.4GHz 13dB Yagi Antenna	49-3202
Flex Coax Cable w/Connectors – Connects external antenna(s) to base unit(s).	49-4000-XX (XX = # of Feet)
* = Line of Sight	

## LIMITED WARRANTY STATEMENT

BWI Eagle Inc. warrants the Air-Eagle Remote Control System, if properly used and installed, will be free from defects in material and workmanship for a period of 1 year after date of purchase. Said warranty to include the repair or replacement of defective equipment. This warranty does not cover damage due to external causes, including accident, problems with electrical power, usage not in accordance with product instructions, misuse, neglect, alteration, repair, improper installation, or improper testing. This limited warranty, and any implied warranties that may exist under state law, apply only to the original purchaser of the equipment, and last only for as long as such purchaser continues to own the equipment. This warranty replaces all other warranties, express or implied including, but not limited to, the implied warranties or merchantability and fitness for a particular purpose. BWI Eagle makes no express warranties beyond those stated here. BWI disclaims without limitation, implied warranties of merchantability and fitness for a particular purpose. Some jurisdictions do not allow the exclusion of implied warranties so this limitation may not apply to you. To obtain warranty service, contact BWI Eagle for a return material authorization. When returning equipment to BWI Eagle, the customer assumes the risk of damage or loss during shipping and is responsible for the shipping costs incurred.

DOCUMENT DATE: 10/18/16 / PRODUCT REV.4



105 Bonnie Drive  
Butler, PA 16002  
(724) 283-4681  
Fax (724) 283-5939  
[www.bwieagle.com](http://www.bwieagle.com)