



105 Bonnie Drive  
Butler, PA 16002  
724-283-4681  
724-283-5939 (fax)  
www.bwieagle.com

# PRODUCT INFORMATION BULLETIN

## AIR-EAGLE® TX CHARGER Charge Base MODEL XX-CHG 1

### DESCRIPTION

The AIR-EAGLE TX CHARGER is a convenient charging base for our rechargeable series of transmitters. This charge base is sold separately and will accommodate the following transmitter models:

- 36R-1500
- 36RE-1500
- 36REB-1500
- 44R-1300
- 44RE-1300
- 44REB-1300

### TRANSMITTER CHARGE STATUS

Your rechargeable transmitter provides LED indication of its charge status as follows:

Full	TX LED gives 3 GREEN blinks
Good	TX LED gives 2 GREEN blinks
Low	TX LED gives 2 RED blinks
Charging Required	TX LED gives 10 rapid RED blinks

### INITIAL SET-UP

Plug charge base into AC outlet where convenient to the operator.

When rechargeable transmitter indicates low battery, insert into the charge cradle.

The LED will illuminate RED while charging and turns GREEN when charging is complete.

Full charge from low battery condition = approx 3.5 hours



### SPECIFICATIONS

Power	12VDC @ 1amp from supplied AC wall adapter
Cell Specs	3 Cells, 2500mAh NIMH type
Charge Rate	550mA max
Trickle Charge Rate	30mA
Short Circuit Protection	Yes
Safety Timer	8 hours

DOCUMENT DATE: 10/3/16 / PRODUCT REV.0



105 Bonnie Drive  
Butler, PA 16002  
(724) 283-4681  
Fax (724) 283-5939  
[www.bwieagle.com](http://www.bwieagle.com)